

Orientations of the Psikohoop

To access different quivers, turn the hoop ON with the button in these positions. (button ● facing you)

when BUMP mode turned on,
bump shifts hoop colors

Confirmation color
will then appear



QUIET quiver

Front and back flips to select hoops



 
SAVED quivers

Side flips to access the other 2 quivers



COMPOSE mode
quiver

Flip to change screens and modes
Wheel turns to select settings



9 PACK quivers

Side flips to access each of 9
or more quivers.



QUIXOTIC (kix) quiver

(button faces up ●↑)

A wide variety of hoops



RANDOM quivers

(button faces down ●↓)

Front flips to speed up.

Backflips to slow down.

Side flip locks (red) unlocks (green)

After side flip:

then front-flips give manual shift,
backflips select countless
truly random hoops

when BUMP mode
turned on, bump shifts
hoop